



Starting Point Settings Tips

- Av = Aperture priority mode
 - f/5.6 = Initial setting
 - You then set the aperture
- ISO400 = Sensitivity to light
- Center Weighted metering
- Center Focus Point only
- Back Button Focus only
- Continuous Shooting
- RAW only
- Keep shutter speed above 1/125:
 - If too slow, below 1/30, open aperture (smaller number)
 - If still too slow, increase ISO (larger number)
- If sunny, lower ISO to improve picture quality
- To blur background, open aperture (smaller f number)
- To sharpen background, close aperture (higher f number)
- For action shots and no blur, increase shutter speed to greater than 1/1000 by:
 - Opening aperture (smaller f number); and or,
 - Increasing ISO (reduces picture quality)